


40-55,000 BTU Forced Air Toro Heaters (1992-1993)

Model Number

Toro
53400
53401
53412

Pump Pressure Settings

BTU	PSI
40	3.0
55	4.1

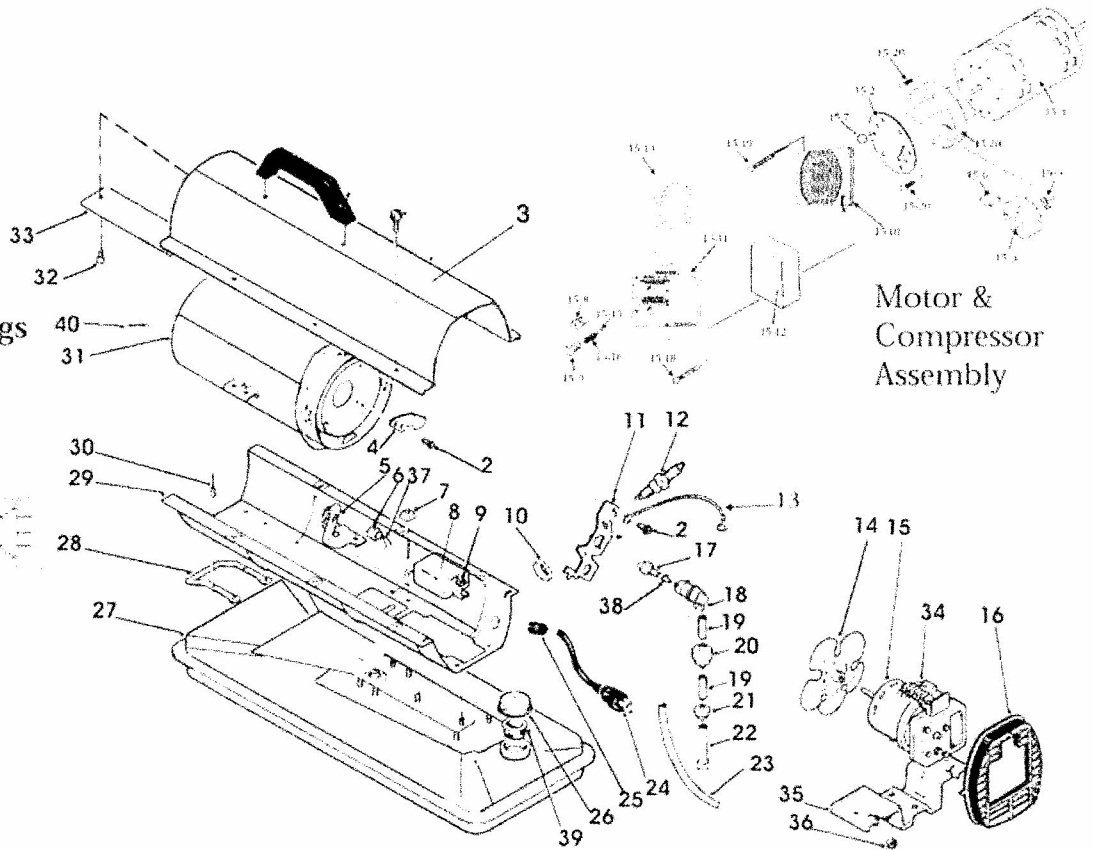

Motor & Compressor Assembly

Key No.	Part No.	Description	Key No.	Part No.	Description
1	148538	Handle	28	148650	Front Guard
2	147000	Screw	29	148586	Lower Jacket
3	148585	Jacket, Upper	30	702365	Rivet
4	148552	Deflector, Rear Head	31	154884	Combustion chamber & heat shield Assy
5	148684	Cad Cell bracket	32	148547	Screw
6	154874	Cad Cell Assy	33	148540	Handle Support
7	148539	Nut	34	154348	P.C. Board w/Breaker Assy
8	73 7100	Transformer - NIA	35	148531	Motor Mount
9	147158	Nut	36	147004	Nut
10	147635	Spark Plug Nut	37	154877	Wire Assembly
11	148545	Bracket, Nozzle Plug	38	147082	O-Ring
12	148544	Spark Plug (RN13LYC5)	39	154685	Strainer Fuel (Optional)
13	15-1930	Ground Wire Assy	40	147083	Rivet
14	15-1900	Fan Assembly (40,000 BTU)	MOTOR & COMPRESSOR ASSEMBLY		
	15-1929	Fan Assembly (55,000 BTU)	15-1	15-1876	Motor 1/15 H.P., 115V 60Hz
15	154879	Compressor & Motor Assy	15-2	154797	Backing Plate
16	148537	Grille	15-3	73-6420	Rotor 5/8"
17	154027	Nozzle Assembly (40,000 BTU)	15-4	147003	Body Ring 5/8"
	154881	Nozzle Assembly (55,000 BTU)	15-5	73-6430	Insert (Black)
18	148530	Nozzle Adapter Kit	15-6	154616	Valve 5/8" (Set of 4)
19	148648	Hose, Fuel Line	15-7	73-6440	O-Ring
20	148647	Fuel Filter	15-8	147009	Plug 1/4 NPT
21	148546	Grommet	15-9	147010	Adjusting Screw
22	148645	Pickup Tube (40,000 BTU)	15-10	148420	Filter Housing-Bottom
	148646	Pickup Tube (55,000 BTU)	15-11	148419	Filter Housing-Top
23	148649	Hose-Air Line	15-12	148442	Input Filter
24	154878	Power Cord Assembly	15-13	154822	Output Filter Kit
25	147053	Strain Relief	15-15	147022	Relief Ball
26	154021	Fuel Cap (includes 148317 fuel gasket)	15-16	147021	Relief Spring
27	154867	Fuel Tank Assy (40,000 BTU)	15-18	148233	Screw (qty. 4)
	154868	Fuel Tank Assy (55,000 BTU)	15-19	148394	Screw